



KK500 *E* KLEINKALIBERGEWEHR



DE

EN

ES


FR



KK500 *E*

BEDIENUNGSANLEITUNG

INSTRUCTION MANUAL
INSTRUCCIONES DE USO
MODE D'EMPLOI

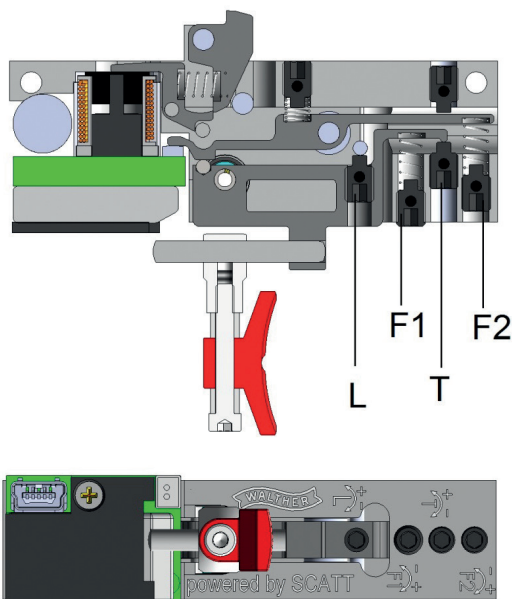

First-stage trigger weight:

Turn screw “F1” clockwise to increase the first-stage trigger weight; turn the screw counterclockwise to reduce it.

Second-stage trigger weight:

Set the second-stage trigger weight using screw “F2”. Turn the screw clockwise to increase the weight. Turn the screw counterclockwise to reduce it.

If the second-stage weight is set too low, the trigger will not work.

First-stage travel:

Turn screw “L” clockwise to reduce the first-stage travel. Turn it counterclockwise to increase the first-stage travel. For single-stage mode turn in screw “L” until the trigger is released. Then turn the screw out just slightly.

Trigger stop:

Turn screw “T” clockwise to reduce the second-stage over-travel. Turn the screw counterclockwise to increase it.

3 HANDLING / SHOOTING / **SAFETY INSTRUCTIONS:**

DE

EN

ES

FR

CAUTION



Always hold the rifle in such a way that it cannot endanger anyone. Even an unloaded weapon must be handled as if it were loaded.

Familiarize yourself with handling the unloaded weapon until you master every step perfectly. Read all of the instructions carefully before firing.

CAUTION



Before you can start shooting, you must switch on the electronic unit.

- Pull the loading lever all the way back.
- Make sure that there is no projectile in the barrel.
- **Pull back the finger rest until the LED begins to blink.**
- The Rifle is now ready for shooting.

